



# EcoBoost MPPT Meter Map

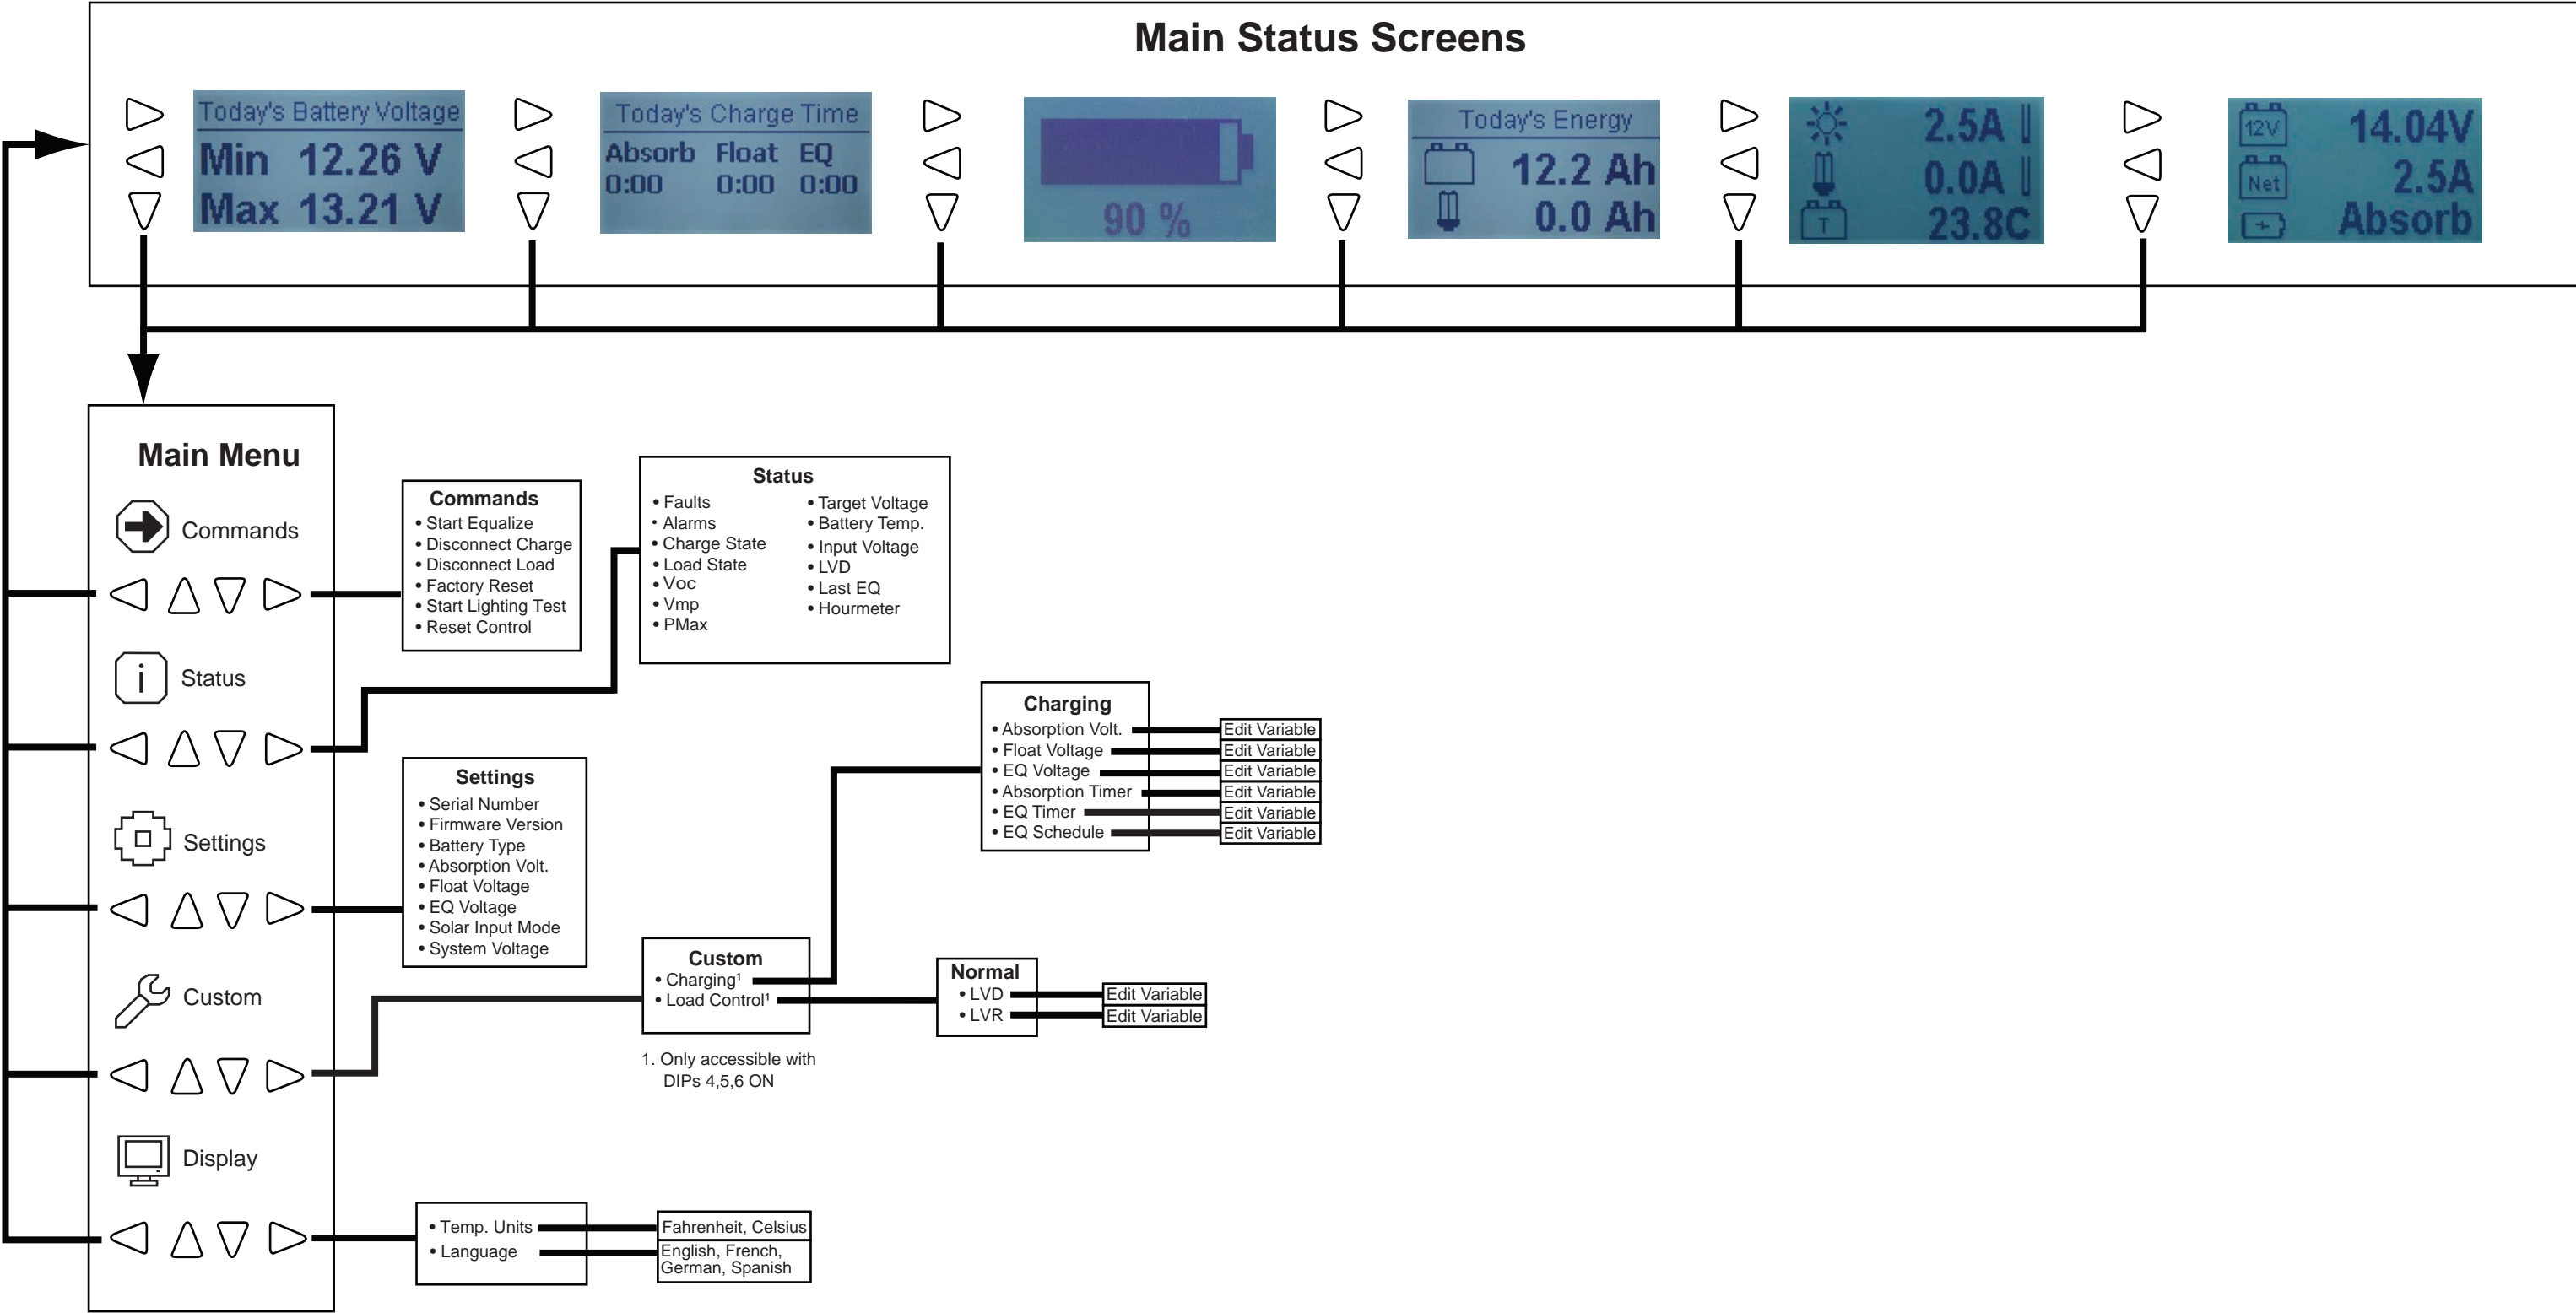


## Main Status Screens / Icons

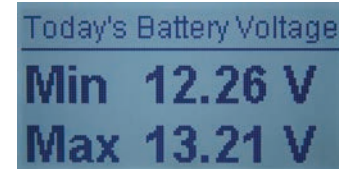

**Min:** Minimum battery voltage recorded today


**Max:** Maximum battery voltage recorded today

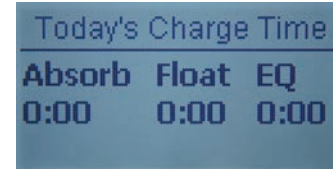


**Absorb:** Cumulative time spent in the Absorption stage during today's charge cycle

**Float:** Cumulative time spent in the float stage during today's charge cycle

**EQ:** Cumulative time spent in the Equalization stage during today's charge cycle

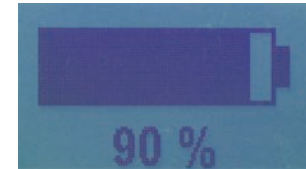


**State-of-Charge Icon:** Real-time battery state-of-charge indication.  
Quality of estimate varies depending on battery health. Shown in 10% increments.

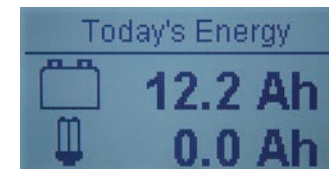

**Battery Icon:** Cumulative Amp-Hours delivered to the battery during today's charge cycle

**Load Icon:** Cumulative Amp-Hours delivered to the Load today

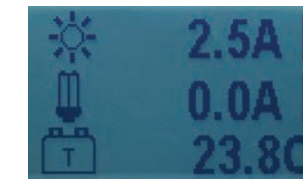


**Sun Icon:** Real-time Battery/Load Current

**Moon Icon:** Night state (no array voltage)

**Load Icon:** Real-time load current draw (Will display 'LVD' for Low Voltage Disconnect and 'LVDW' for Low Voltage Disconnect imminent Warning)

**T Battery Icon:** Real-time Battery temperature as measured by the RemoteTemperature Sensor (if no RTS present, displays local temperature)

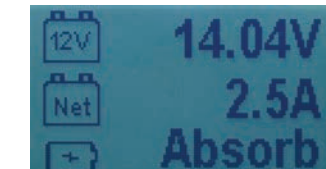


**Battery Icon:** Real-time battery voltage

**Net Icon:** Real-time Net current into or out of the battery

**Charge Icon:** Real-time Charging Stage

### How to Navigate

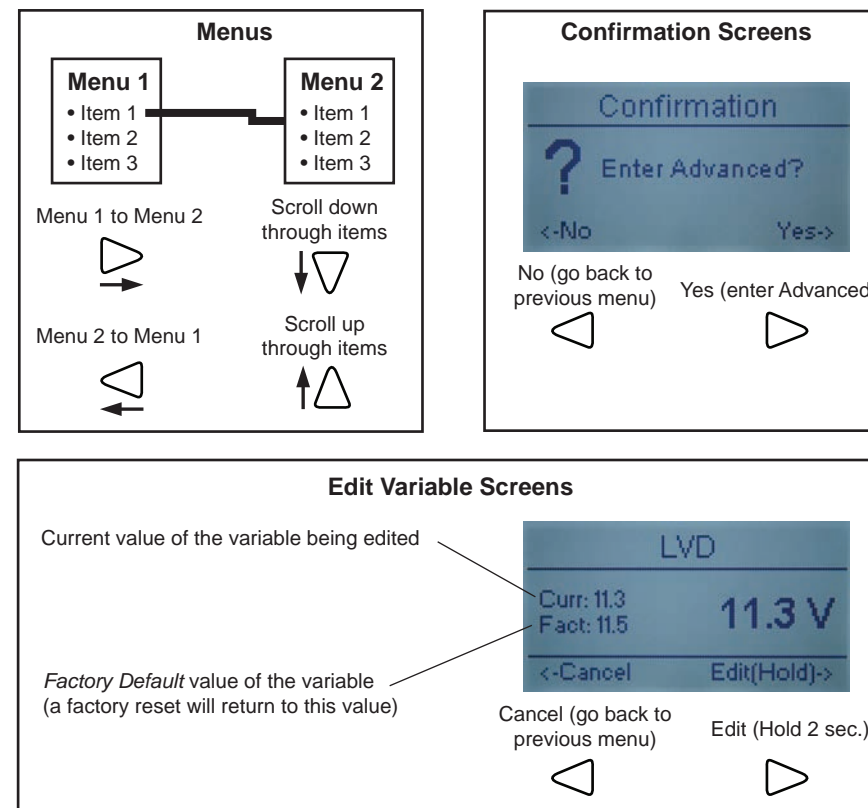

### Faults and Alarms

- Array Faults**
- *Output Overcurrent*
  - *FET Short:* Possible power MOSFET damage
  - *Software:* Software fault
  - *Batt HVD:* Battery Voltage exceeded High Voltage Disconnect threshold
  - *Array HVD:* Array Voltage exceeded
  - *Settings:* Custom settings change
  - *Batt TS Short:* Remote Temperature Sensor shorted
  - *Batt TS Discor:* Remote Temperature Sensor disconnected
  - *THS Failed:* Heatsink Temperature Sensor failure
  - *Batt LVD:* Battery Voltage too low for charging
- Load Faults**
- *Ext Short:* Wiring error
  - *Overcurrent:* Load draw exceeded current rating
  - *FET Short:* Possible power MOSFET damage
  - *Software:* Software fault
  - *HVD:* Battery Voltage exceeded Load High Voltage Disconnect threshold
  - *HS Overtemp:* Heatsink temperature too hot
  - *DIP switch:* DIP switch settings changed
  - *Settings:* Custom settings change
- Alarms**
- *Batt TS Open:* Remote Temperature Sensor open
  - *Batt TS Short:* Remote Temperature Sensor shorted
  - *Batt TS Discor:* Remote Temperature Sensor disconnected
  - *THS Open:* Heatsink temperature failure
  - *THS Short:* Heatsink temperature failure
  - *THS Hot:* Heatsink temperature too hot
  - *TIND Open:* Inductor temperature sensor open
  - *TIND Short:* Inductor temperature sensor shorted
  - *TIND Hot:* Inductor temperature too hot
  - *Current Limit:* Battery charge current limit
  - *Current Offset:* Current measurement error
  - *Uncalibrated:* Voltage and/or Current measurement uncalibrated
  - *TB5v:* 5V supply out of range
  - *FP10:* Floating 10V supply out of range
  - *Miswire:* External wiring error
  - *FET Open:* Possible power MOSFET damage
  - *Ia offset:* Current measurement error
  - *Ii offset:* Current measurement error
  - *P3:* 3V supply out of range
  - *P12:* 12V supply out of range
  - *High VA:* Array Voltage too high
  - *Reset:* Controller was reset
  - *LVD:* Low Voltage Disconnect
  - *Log Timeout:* Log entry write timeout